


How to Activate DiRoots Plugin Trial Licenses





1. Download and Install All Required Plugins

Download the latest installers from our website for the plugin you need and then install it.

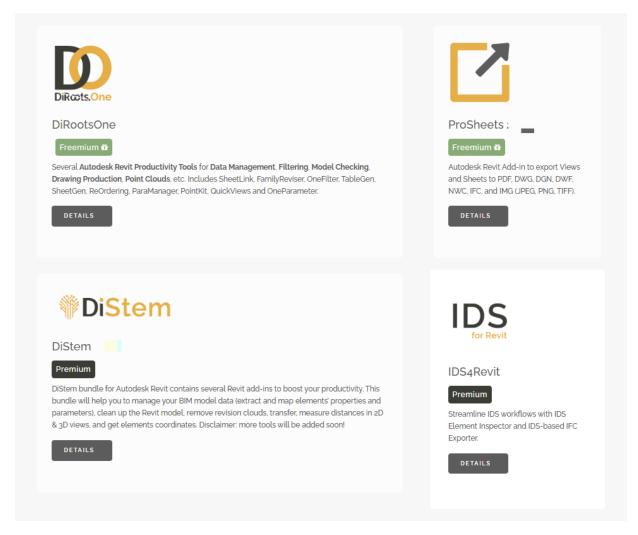

2. Open the Plugin in Revit

- Launch Autodesk Revit on your computer.
- Open the **DiRoots Plugin** you want to activate.

3. Unlock Premium Features


- In the Revit ribbon, locate and open the installed DiRoots plugin.
- **Click the "Unlock Premium" button** at the top of the plugin. If prompted for credentials, proceed to the next section.

4. Request Trial License

• After clicking "Unlock Premium", select the "Request Trial" option.






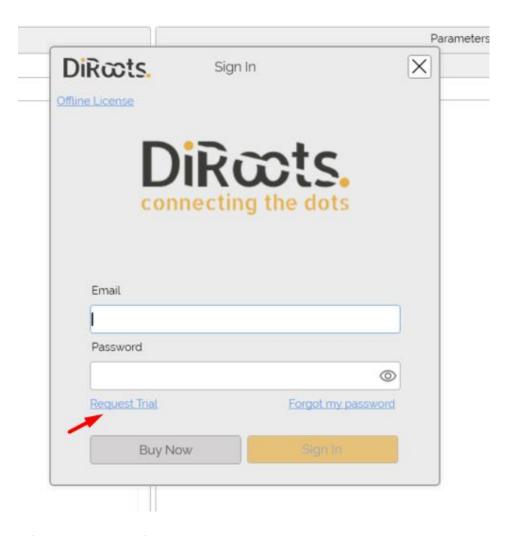

- A form will appear fill in all the required details, including:
 - Your email address
 - Your name
 - Other fields as shown in the form.
- Click on "Request Trial" to submit the form to complete your trial request.





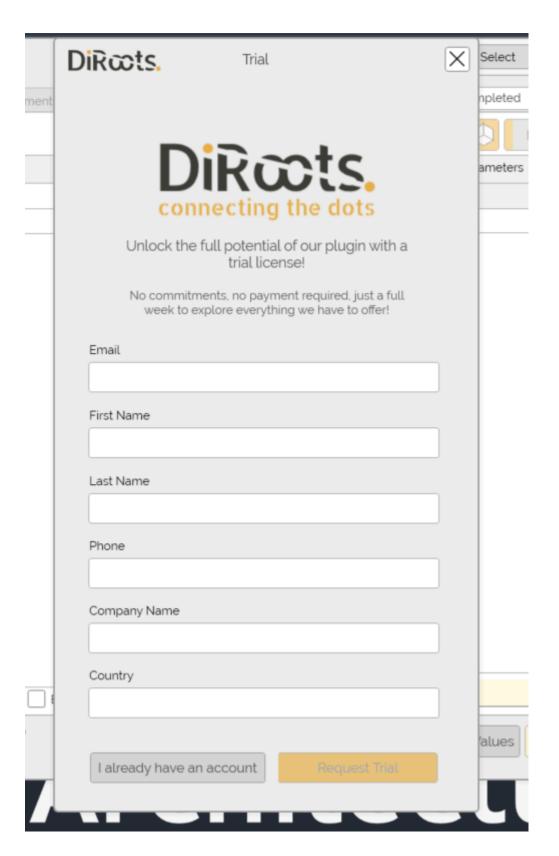

5. Receive Trial Credentials

 After submitting the trial request, you will receive an email from License Spring with your login credentials as shown below.






• Check your Inbox or Spam/Junk folder for this email.



You have been assigned a license as a User.

You have been assigned a license with the role of a license user. To manage your license, please log into the user portal.

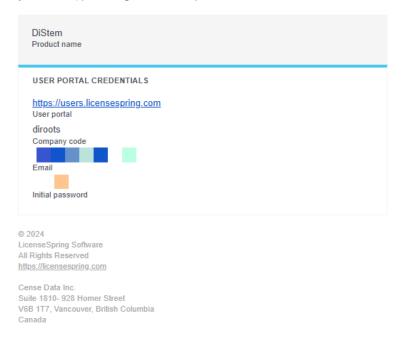

- Then, you can use them to log into your account and have full access to the plugin.
- 6. You can use the same process for other DiRoots plugins
 - Follow the same steps for all DiRoots plugins you want to activate.
 - Ensure you use the correct credentials for each trial activation.

7. Troubleshooting and Support

If you encounter any issues during activation or have questions, please:

- Refer to the Licensing User Guide.
- Contact our support team at support@diroots.com.

